


## Installation

1. All Firestone Systems are pre-assembled (no field assembly).
2. Sweep off loose gravel, if gravel exists.
3. Consult manufacturer of existing or new roofing system as to type of isolation pads required for their roofing system.
4. Determine spacing of supports.
5. Fully adhere isolation pads to roof system if required.
6. After pads are installed, place bases on pads.
7. Place pre-assembled support into bases and adjust as needed. Note, support shall be adjustable to maintain existing elevation and slope.

## Product Specifications

Bases:	High Density Polypropylene Plastics & other additives for UV Protection
Weight:	Bases, 7 pounds each
Dimensions:	18" x 18" x 3"
Frames:	Manufactured from 1½" B22TH strut and 1½" BTS22TH strut .125-.250W when telescoped.
	HDG or Stainless Steel threaded rods, nuts, and washers.

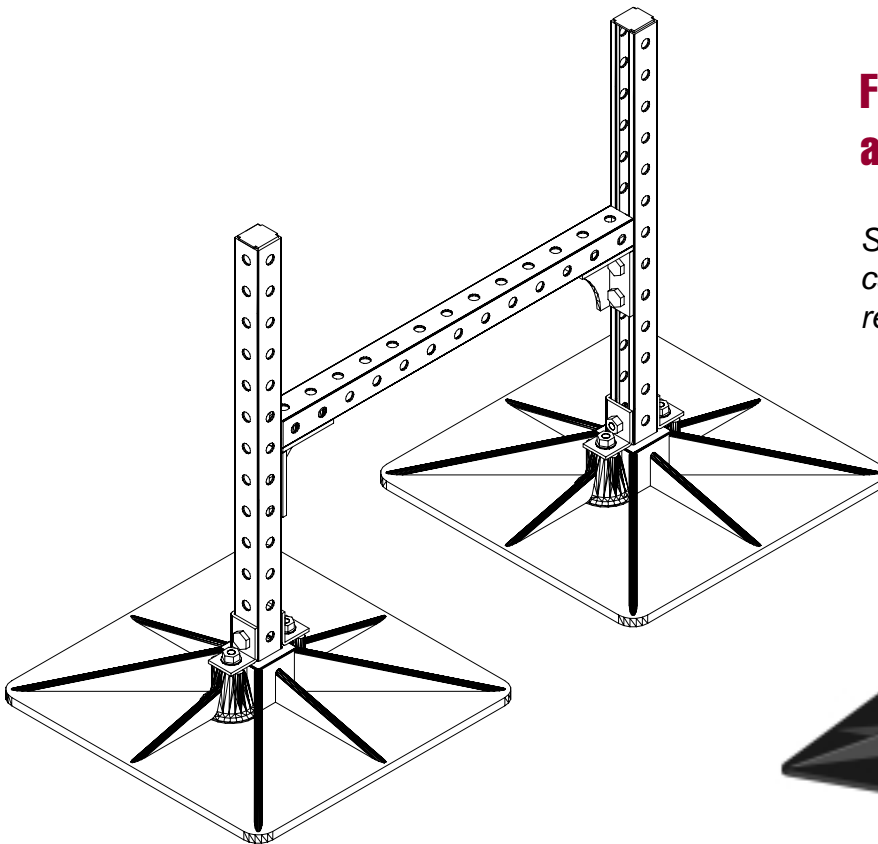

**For Duct Sizes 12" x 12"  
and Larger**

*Supports for round ducting and cable tray are also available upon request.*

