


Installation

1. All Firestone Systems are pre-assembled (no field assembly).
2. Sweep off loose gravel, if gravel exists.
3. Consult manufacturer of existing or new roofing system as to type of isolation pads required for their roofing system.
4. Determine spacing of RTU-20 supports.
5. Fully adhere isolation pads to roof system if required.
6. After pads are installed, place bases on pads.
7. Place pre-assembled RTU-20 support into bases and adjust as needed. Note, support shall be adjustable to maintain existing elevation and slope.

Product Specifications

| | |
|-------------|--|
| Bases: | High Density Polypropylene Plastics & other additives for UV Protection |
| Weight: | Bases, 7 pounds each |
| Dimensions: | 18" x 18" x 3" |
| Frames: | Manufactured from 1½" B22TH strut and 1½" BTS22TH strut .125-.250W when telescoped. |

HDG or Stainless Steel threaded rods, nuts, and washers.

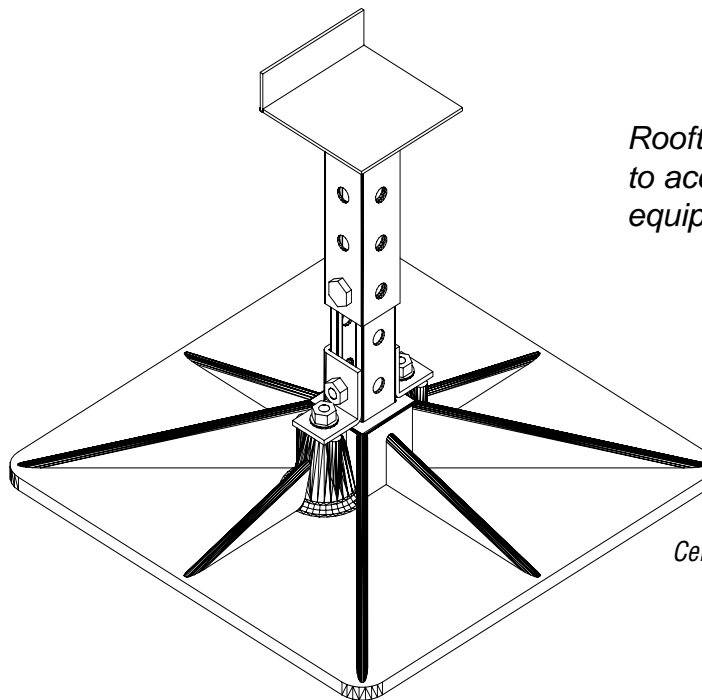

*Rooftop unit supports
to accommodate multiple
equipment applications.*

