


PP10 with Strut & Hanger

Installation

1. All Firestone Systems are pre-assembled (no field assembly).
2. Sweep off loose gravel, if gravel exists.
3. Consult manufacturer of existing or new roofing system as to type of isolation pads required for their roofing system.
4. After pads are installed, place bases on pads.
5. With all pipe supports in place, start at the beginning of the system and adjust each hanger to achieve a balanced system.

Product Specifications

Bases: High Density Polypropylene Plastics & other additives for UV Protection
Weight: Base with assembly 6 pounds
Dimensions: 10" x 16" x 3"
Height: Adjustable
HDG or Stainless Steel threaded rods, nuts, and washers.
For Pipe sizes 3" and smaller.

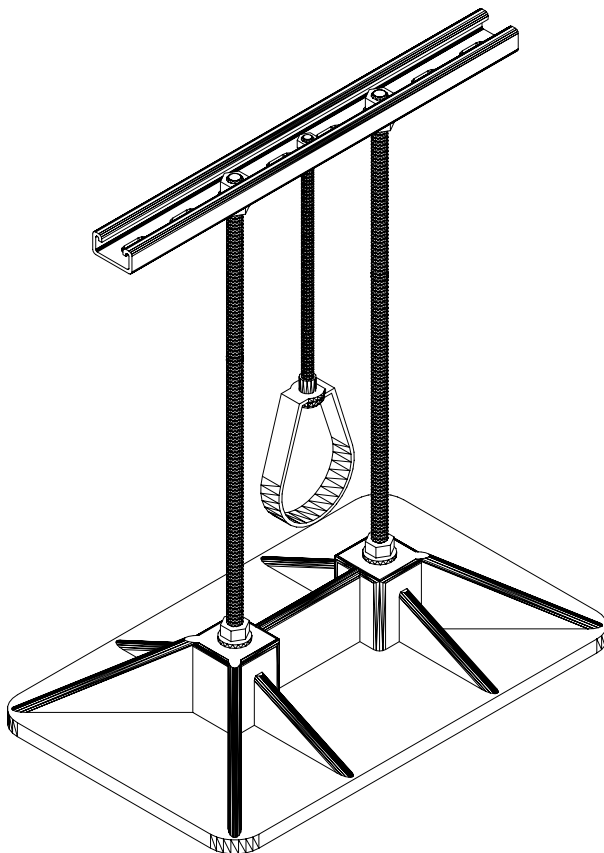

**For 3" and Smaller
Conduit and Gas Lines**

