


Type PS-1-2

Installation

1. All Firestone Systems are pre-assembled (no field assembly).
2. Sweep off loose gravel, if gravel exists.
3. Consult manufacturer of existing or new roofing system as to type of isolation pads required for their roofing system.
4. After pads are installed, place bases on pads.
5. Place frames over pipe to support and insert in bases.
6. Secure pipe in hangers and adjust.
7. With all pipe supports in place, start at the beginning of the system and adjust each hanger to its desired height. This process should be done in stages, raising the pipe approximately $\frac{1}{2}$ " at a time. When desired height is reached, check each support to determine if an equal amount of weight is being distributed at each support.

Product Specifications

Bases:	High Density Polypropylene Plastics & other additives for UV Protection
Weight:	Bases, 3 pounds each
Dimensions:	12" x 12" x 3"
Frames:	Manufactured from B22TH 1 $\frac{1}{8}$ " strut.
Hanger Height:	Adjustable
	HDG or Stainless Steel threaded rods, nuts, and washers.
	Hot dipped galvanized roller, clevis or band hangers as specified.
	For Pipe sizes 4" and larger.

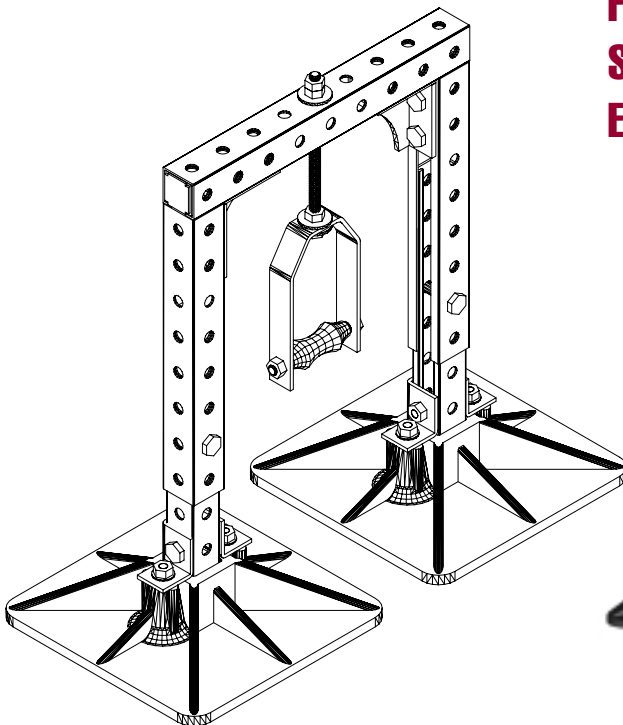

**For 4" and larger Pipe
Sizes Including Gas,
Electrical and HVAC**

